



Nikon Coolpix L830 LCD Monitor Replacement

Replacing a broken or corrupted LCD monitor to allow access to take photos on Nikon Coolpix L830.

Written By: Blake Johnson



INTRODUCTION


If the LCD monitor on your Nikon Coolpix L830 is corrupted or completely blank, replacement is necessary. Following these steps will allow you to replace the broken screen with a new one to allow complete monitor functionality to return.



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD Monitor

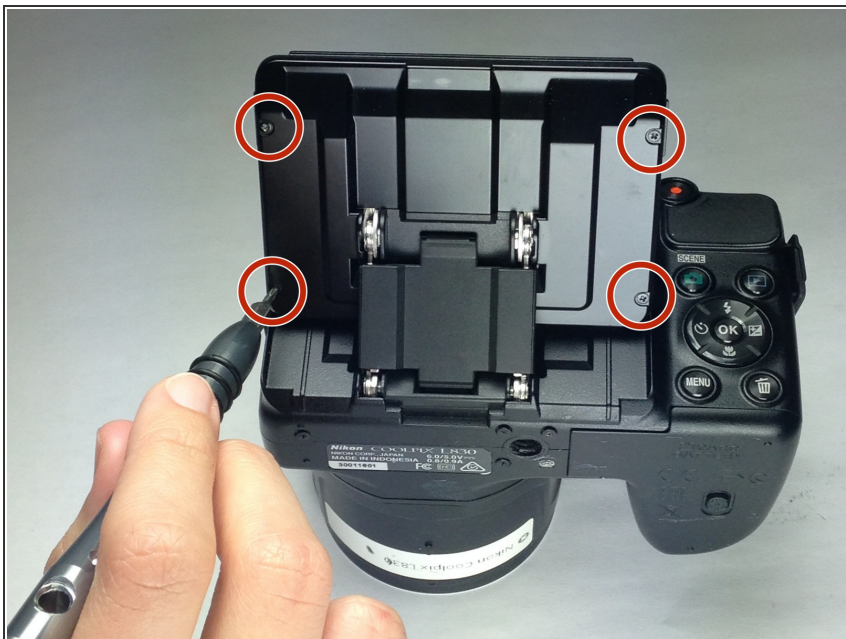

- Use a Phillips head P000 screwdriver to remove the four 3.0 mm Phillips screws on the back of the monitor.

Step 2

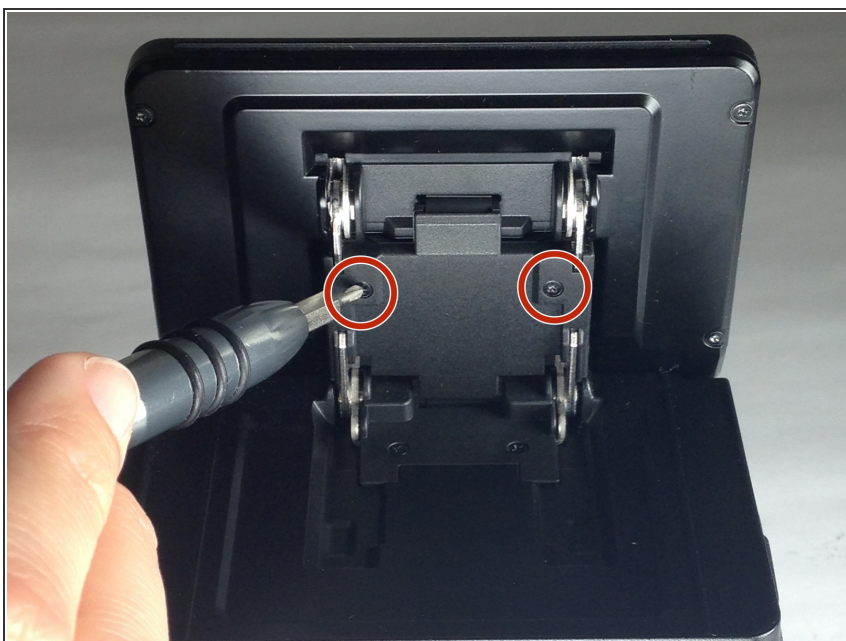

- Use a Phillips head P000 screwdriver to remove the two 3.0 mm Phillips screws on the hinge cover.

Step 3





- Remove the top hinge cover.
- ❗ The top hinge cover contains screw holes.
- Remove the bottom hinge cover.
- ❗ The bottom hinge cover contains no screw holes.

Step 4



- Remove the back cover of the LCD monitor with your hands or a plastic opening tool.
- ❗ The cover will slide down the hinge, but it will not be completely removed.

Step 5

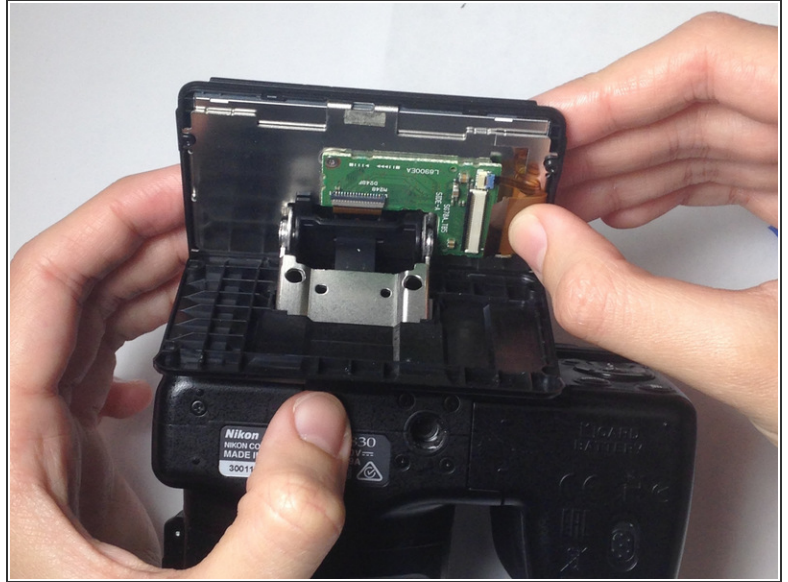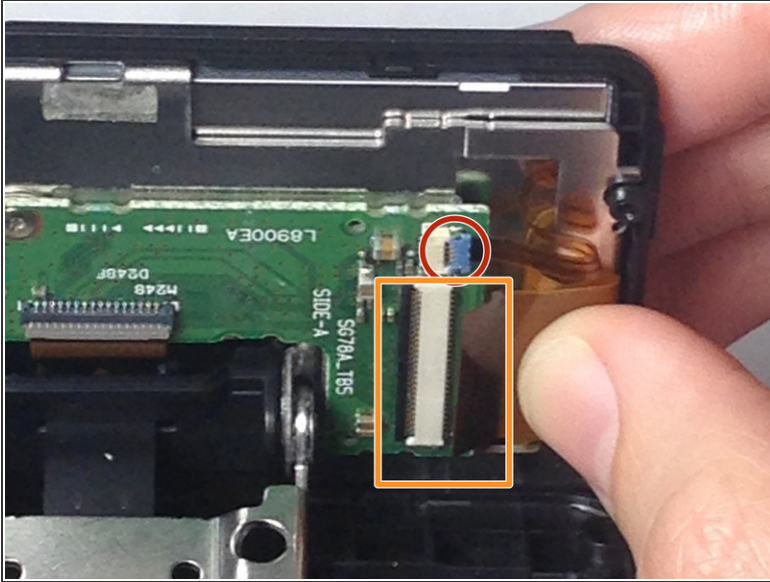


- Use your thumb to gently pull the small flex ribbon wire connector from its socket.
- Use your thumb to gently pull the wide flex ribbon wire connector from its socket.

Step 6



- Use a plastic opening tool to remove the front cover of the LCD monitor, allowing the monitor to be completely released.

Step 7

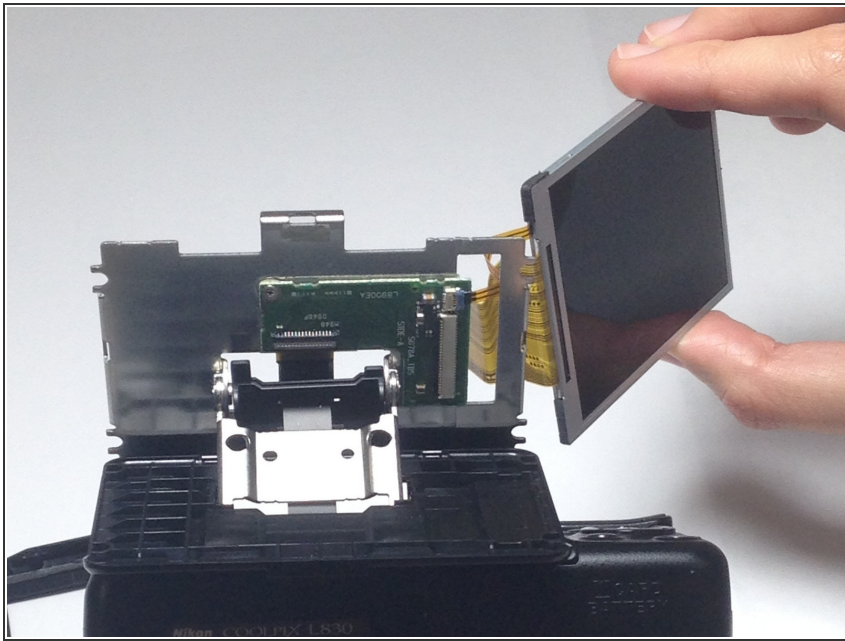

- Gently remove the old, damaged LCD monitor.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:29:45 AM.